




HiCube[®] Neo

The new generation of
pumping stations

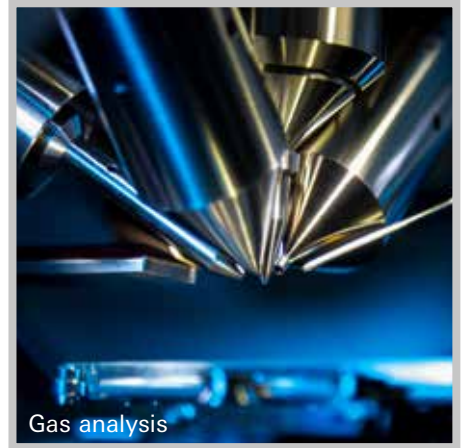

Gas analysis



Cryogenics



High and ultra-high vacuum


HiCube[®] Neo

The new generation of
pumping stations



Simple operation
with touch display

Your added value

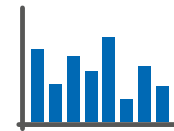

Measurement
data recording
via OPC UA

Powerful and versatile


With a pumping speed of 80–800 l/s, our HiCube Neo turbo pumping unit offers the performance you need for your high vacuum applications. When using a HiPace H, an ultra-high vacuum of $< 10^{-10}$ hPa can be achieved. The availability of different backing pumps, such as diaphragm, rotary vane, scroll and multi-stage Roots pumps, makes it extremely versatile. With desktop and standalone versions and configurability for any application, we offer maximum flexibility.

Intuitive control and analysis

The HiCube Neo is ready for immediate use thanks to its plug-and-play operation. It is controlled intuitively via the 7" color touch screen control panel. Convenient monitoring and remote control via the web server are also possible, while the recording of measurement data via OPC UA, enables detailed analysis for optimum process control. Combine the HiCube Neo with our comprehensive portfolio of measuring devices and other accessories to create customized solutions for any high vacuum application.

Reliable and robust

Rely on the proven robustness and reliability of our HiCube Neo, which is designed to work reliably even under demanding conditions. The open design enables easy maintenance and uncomplicated access to the components.

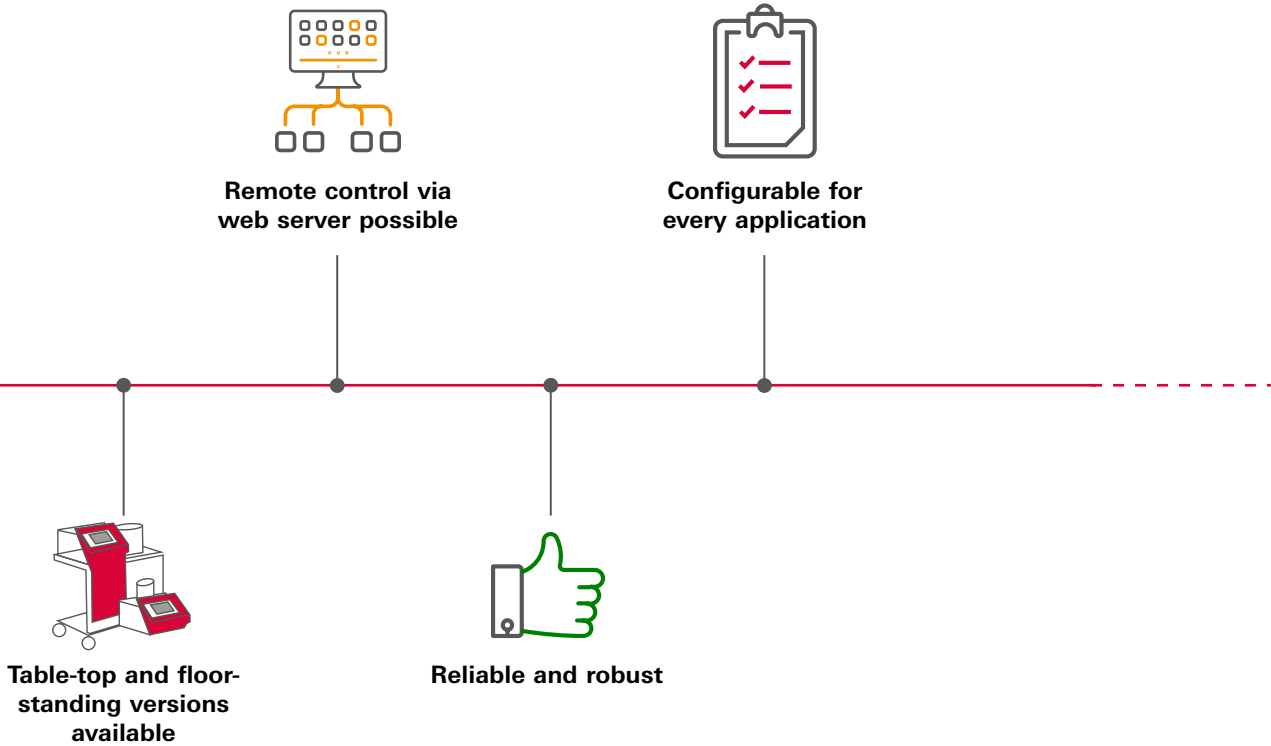

Energy efficient

The energy-efficient stand-by operation of the backing pump not only saves energy, but also reduces your operating costs.

Areas of application

The HiCube Neo turbopumping unit is the ideal partner for a wide range of applications in industry and research & development when it comes to generating high vacuum or pumping out small volumes.

Typical fields of application are


- Gas analysis
- Calibration of measuring tubes
- Laboratory applications
- Residual gas analysis
- Cryogenics

Experience the future of vacuum technology with our new turbopumping station – innovative, powerful and tailored to your requirements.

HiCube® Neo

Connection options and desktop unit configurations

Displays

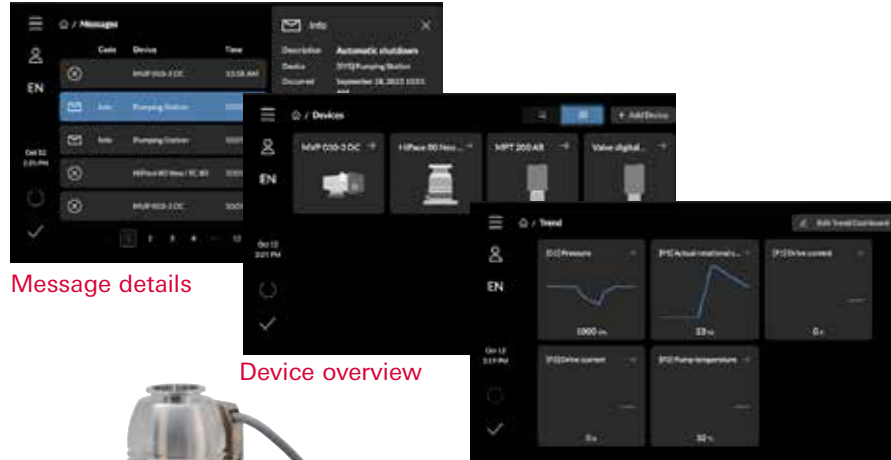

Message details

Device overview

Trend overview



Web dashboard via Ethernet connection for remote control of the pumping station

Connection options





RS-485 for connecting up to 15 digital DigiLine gauges

With the Gauge I/O option, it is possible to integrate an analog ActiveLine gauge into the pumping unit



Desktop unit


Turbo pumps		Ideal for UHV applications
		
HiPace 80 Neo	HiPace 300	HiPace 300 H

Backing pumps	
	
MVP 015-2	MVP 030-3

Order number matrix HiCube Neo – Desktop unit

Turbopump		bb
	DN 40 ISO-KF	00
HiPace 80 Neo	DN 63 ISO-K	01
	DN 63 CF-F	02
	DN 100 ISO-K	20
HiPace 300	DN 100 CF-F	21
	DN 100 ISO-K	22
HiPace 300 H	DN 100 CF-F	23
	Backing pump	
Diaphragm pump	MVP 015-2	00
	MVP 030-3	01
Accessories		d
Gauge I/O + venting valve		1
Gauge I/O		3
Venting valve		5
Without accessories		7
Cooling		e
Air cooling		0
Water cooling		1
Extension kit (for external operation of the turbopump)		f
Without extension		0
Cable and fore-vacuum line set 3 m		1
Cable and fore-vacuum line set 5 m		2
Cable and fore-vacuum line set 10 m		3

PM Q1bb ccd ef



HiCube® Neo

Floor-standing unit configurations

Floor-standing unit

Turbopumps						
						
HiPace 80 Neo	HiPace 300 / HiPace 300 H ¹⁾	HiPace 350	HiPace 400	HiPace 450	HiPace 700 / HiPace 700 H ¹⁾	HiPace 800 / HiPace 800 H ¹⁾
Backing pumps						
						
DuoLine 6,11,20 M		HiScroll 6, 12,18		SmartVane 55, 77		ACP 15, 28

¹⁾ The HiPace H is ideal for UHV applications

Control and safety valves



Turbopump with venting valve



Backing pump with backing vacuum safety valve





Order number matrix HiCube Neo – Floor-standing unit

PM Q2bb ccd ef

Turbopump				bb	
HiPace 80 Neo	DN 40 ISO-KF	00	HiPace 450	DN 100 ISO-K	60
	DN 63 ISO-K	01		DN 100 CF-F	61
	DN 63 CF-F	02		HiPace 700	DN 160 ISO-K
HiPace 300	DN 100 ISO-K	20	DN 160 CF-F		81
	DN 100 CF-F	21	HiPace 700 H	DN 160 ISO-K	82
HiPace 300 H	DN 100 ISO-K	22		DN 160 CF-F	83
	DN 100 CF-F	23	HiPace 800	DN 200 ISO-K	90
HiPace 350	DN 100 ISO-K	40		DN 200 CF-F	91
	DN 100 CF-F	41	HiPace 800 H	DN 200 ISO-K	92
HiPace 400	DN 100 ISO-K	50		DN 200 CF-F	93
	DN 100 CF-F	51			

Backing pump		cc
Two-stage rotary vane pump	Duo 6 M, 110 V	10
	Duo 6 M, 230 V	11
	Duo 11 M, 110 V	12
	Duo 11 M, 230 V	13
	Duo 20 M, 110 V	14
	Duo 20 M, 230 V	15
Scroll pump	HiScroll 6	30
	HiScroll 12	31
	HiScroll 18	32
Single-stage rotary vane pump	SmartVane 55	40
	SmartVane 70	41
Multistage Roots pump	ACP 15	50
	ACP 28	51
	ACP 40	52

Accessories		d
Gauge I/O + venting valve + fore vacuum safety valve		0
Gauge I/O + venting valve		1
Gauge I/O + fore vacuum safety valve		2
Gauge I/O		3
Venting valve and fore vacuum safety valve		4
Venting valve		5
Fore vacuum safety valve		6
Without accessories		7

Cooling		e
Air cooling		0
Water cooling		1

Extension kit (for external operation of the turbopump)		f
Without extension		0
Cable and fore-vacuum line set 3 m		1
Cable and fore-vacuum line set 5 m		2
Cable and fore-vacuum line set 10 m		3

Your Success. Our Passion.

We give our best for you every day –
worldwide!

**Are you looking for an
optimal vacuum solution?**
Please contact us:

Pfeiffer Vacuum GmbH
Germany
T +49 6441 802-0



Errors excepted. All data subject to change without prior notice. PT 0210 PEN (January 2024/PoD)

Follow us on social media
#pfeiffervacuum



www.pfeiffer-vacuum.com

PFEIFFER  **VACUUM**